

How to use your Globalstar Satellite Phone

- This phone # _____ . **Unlock code is SECRET.** (Ask Company, see setup)
- You must be outside.** The more sky the better. The satellites are up there, moving fast.

Sat connections take up to one minute. Be patient.

1. **RAISE (rotate) the cigar-like Antenna on the side of phone,**
2. **Manually EXTEND the antenna +3 inches.**
3. **Hold the antenna VERTICAL while using.**
4. **POWER ON.**

(If Phone is locked, point to the word 'UNLOCK' and
and enter SECRET pin code.)

Phone will search for Service. When it registers with the satellite, you will see a **Satellite icon**, and an **antenna icon** with a **signal strength** of 3-4 bars. Just like a cell phone.

>>>> **WAIT until you see the ' house ' icon**
meaning ready to dial or receive a call.

Using the Display – the selection pointer buttons enable functions on the display, i.e., point to 'menu', or point to 'unlock'.

Using the menu - Point to the word MENU. Enter menu numbers, or Scroll. up/down buttons (see arrow keys at bottom of keypad). **CLR** key will back up.



GSP-1700
Charger on bottom

HOW TO DIAL (from US, to the US or Canada):

Dial 1 + area code + phone number. Press SEND. (antenna must be held vertically)

From US or Canada to dial another Country - dial 011 + country code + number.

If a voice reports "call can not be completed as dialed" - you are ROAMING and must dial with international method.

HOW TO DIAL from outside North America - "International Roaming"

Press & Hold '0' key until a + sign appears. Then add country code, area code and number. SEND.

- The US country code is 1.
- Whether you own or rent the phone - Roaming calls cost more and long distance charges apply.
- If calling into the country whose gateway you are already connected to – after the + sign, omit the country code but enter the area code + phone number.)

HOW people call you: This phone has a US Area Code (254, 863, etc). They dial you normally: 1+ac+num.

If your phone is on and on the satellite, it will ring. Press SEND and talk. If OFF, they get voice mail.

- Voice message** service is active. Call the satphone number (from any phone) to get messages. Interrupt greeting with the "5" key. (Older system enter '1' key.) Use the password (same a unlock code.)

VOICE MAIL How to Retrieve Voice Mail - A small icon (envelope) notifies you of voice messages.

Menu-3 will inform what kind of messages you have.

Dial "your Globalstar Phone number" from your satphone or from any land line. Hear the greeting.

>> **Enter '5' key to interrupt the greeting. Enter your password (same as unlock code).**

Listen to messages. Control keys are: 1=back. 2=pause. 3=skip. 7=erase. * =exit

For HELP - dial *611 send (free call) and Globalstar customer care will answer. Or dial **1-877-452-5782 (SEND).**

For GPS position – press Menu, 4,3. point to word 'update'. **Do this during a call in progress.**

Charging Battery - To charge phone, charger pin fits in connector on **BOTTOM** of phone.