

How to use your Iridium Satellite Phone

This phone number has 12 digits: **8816-** _____ - _____. Secret pin # _____ (to unlock).

>>> **You must be outside** in line-of-sight of an expanse of sky for satellite service.

Raise antenna vertically. Power on (red button). **Enter pin** (i.e., 1111). Wait for registration with satellite.

A 'house' icon will display when connected. **Sat connections take up to one minute. Be patient.**

Signal strength should be 3-4 bars for good signal connection.

To make a call: all calls start with 00 (the international code) (think international, even when calling next door)

>>> **start with 00**, then **country code, area code, phone number, OK(send)**.

note: the **+** sign will serve as the international outgoing code from any country. (hold the 0 key until **+** appears)

i.e., call New York from overseas: **00 1 212 555-1234 OK** or **+ 1 212 555-1234**

Iridium help desk 1-866-947-4348 (toll free from US land line) or from international 480-752-5155

INCOMING MESSAGES

Voice Messages are Notified by an icon. You will be calling the voicemail center using the "Envelope" Key.

Press Envelope Key. This dials a preset number 00 8816 6299 0000 (see menu / message / voicemail / settings)

>> 1. Iridium Voice says "ENTER YOUR IRIDIUM NUMBER". Enter (8816-etc) (your 12 digit phone number, not your pin).

>> 2. When you hear the personal greeting (Jack's Voice) - **Press * (star) to interrupt this greeting.**

>> 3. Then, Iridium voice will ask for **password** (pin): Enter (your secret pin code) _____.

Enter **1 to play** messages. Other codes are: 1=rewind, 2=pause, 7= delete, #=goodbye.

Text Messages (email) download automatically when you connect with the Satellite. "Read message now?"

Press OK to read, scroll with <> keys. or Press C to read later. Press envelope, menu to 'Received Msgs. OK.

Phone book: Add favorite numbers. Start with 00, country code etc. The **M+** key will add the number to phone book. Type name and quick key selection. To quick dial: press and hold number key while connected to satellite..

HOW CALLERS CAN REACH YOU:

Warning: one can dial direct to the Iridium Satellite phone but it's very, VERY expensive. \$10-16 /minute

To dial direct 011 8816 + 8 more digits of your phone number.. (011 is the USA intl outgoing access code).

Instead - Use the 2 stage dialing through the Iridium hub in Arizona...

>>> **Dial the HUB >> 1-480-768-2500.** Enter the 12 digit Iridium phone number" (8816 _ etc).

Call is sent to satphone. If no answer (Iridium phone is off line), caller is forwarded to VOICE MAIL.

Voice mail will ask again for the Iridium #. Enter number (again) and hear personal greeting (Jack's Voice).

Caller can leave a verbal message or a numeric callback number, as follows....

-- Voice Message: **leave message, press # to end.** (not sent yet). **press # again to send.**

-- Numeric Callback Message: choose **9, then 1.** enter number, # to end, # to send.

To send email (text msg) to this satphone's address: (emails can be up to 120 characters)

1. address message from any email program to: **8816 _____ @ msg.iridium.com.**

2. go to www.iridium.com and use their message program. enter phone number and type message

~~~~~ KEY PAD BUTTONS

OK for placing call (send), receiving call (answer), accepting menu option (select).

C to clear last digit or selection. Hold C = return to beginning.

<> (up, down) for scrolling through menu. MR # shows this phone's number

* and #, (simultaneously) - lock/unlock keypad.

Env (envelope) to access voice mail, Press OK to dial

M+ Add a displayed number into phone book. Type a name. Press > for next char/space.

| (up arrow) for quick access to functions, Volume keys (up, down) on left side

e.g., |3 = call voice mail, |2 = mute, |4 = battery meter, |1 =find name, |5=lock phone (unlock code=_____)

~~~~~ Unblock code (PUK)

If the phone says "blocked", it's because you mis-entered the pin several times.

To correct this, enter five characters, * * 0 5 * (star, star, zero, five, star). Press OK (if necessary).

Enter 8 digit PUK code _____ (enter carefully. see all 8 digits on screen). Press OK.,

Then enter a new 4 digit pincode (i.e. 3333). Press OK. Reenter same pin. Press OK. Power OFF, then ON.

courtesy: **Image Management Systems, Inc. (IMS) 212 741-8765 www.imagemgt.com**